

## DIRECTIONS:

1. Lay the fabric theater down with the green section spread out on the floor. Connect and insert rods as shown.
2. **Connect 2 sets of BLACK rods as shown.**



Slide 1 set of 3 connected BLACK rods through the pole sleeve of the front stage floor. Slide the other set of 3 connected BLACK rods through the pole sleeve at the door opening and position across the back stage floor.

3. **Connect 2 sets of the BLACK CORNER rods as shown.**



Position these rods on the sides of the floor and use the WHITE corner connectors to connect all BLACK rods together to complete the floor frame.

4. **Connect 3 RED rods as shown to make 4 sets.**




Insert 1 set of 3 RED rods into each of the back stage corners, and pull the fabric up over these rods. While standing inside the center of the fabric theater walls, continue to insert the RED rods into the other corners while pulling the fabric theater up over the top of these rods.

5. **Connect the WHITE rods as shown to create the top ceiling frame.**




Using the WHITE corner connectors, insert the top WHITE rods starting with the ticket booth side first, then the dressing room, then the refreshment stand, and lastly the front stage. (Note: the last rod will take a little more strength to insert into the last corner connector.)

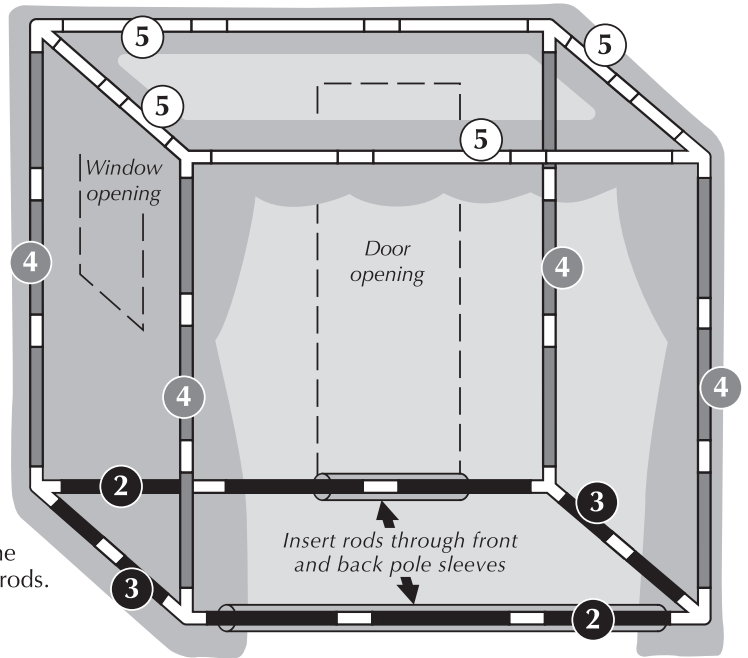

**WARNING! NOT SUITABLE FOR CHILDREN UNDER THREE YEARS DUE TO SMALL PARTS**  
Please keep all relevant information for future reference


## USING YOUR ACCESSORIES:

- Slide white board marquee into plastic sleeve on top area of front stage.
- To open the ticket booth and refreshment stand windows, tuck the curtains over the top ceiling rods.
- Set the time of your show using the show time clocks above the windows of the ticket booth and refreshment stand.
- Slide your cast photos into the plastic pockets in the ticket booth area.
- Slide the show theme sign into the plastic sleeve beneath the window of the ticket booth. Use the white side to create your own theme.
- Write refreshment prices on pieces of paper (5 cm x 10 cm) and slide into the plastic holders. Insert some treats into the candy pocket.
- Remove and discard the protective film on both sides of the mirror.
- Store accessories and scripts in pockets under dressing room mirror.
- Keep your theater trunk box packaging to store your theater when not in use or to store costumes inside.

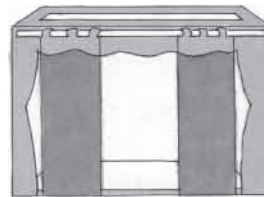


### CURTAINS

Attach the 2 red curtains to the front-stage-opening ceiling rods using the hook and loop straps. Attach loosely so they can easily slide open and closed.

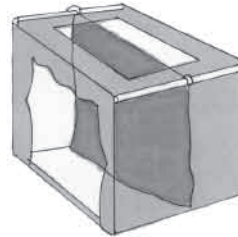

### BACKDROP

Attach the backdrop scene to the top and bottom side rods using the hook and loop straps. Position it in the back when using the full stage and slide forward for puppet shows. Create a dressing area by positioning it in the center.

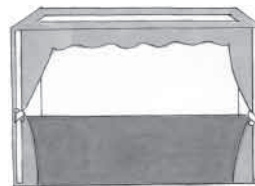

### PUPPET SHOW PANEL

Attach the hook and loop straps of the Puppet Show panel around the side upright corner rods and through the loops which are sewn into the corner seams of the theater. The loops will keep the panel from sliding down.

## WHEN USING OUTDOORS:

To set up outdoors, attach the theater to the ground by sliding tent stakes (not included) through the four corner loops at the base of the theater. **CAUTION:** Do not leave the theater outdoors unattended or when not in use. Strong winds may cause the theater to blow away even if staked securely to the ground. This theater is not waterproof. Do not use theater outdoors when wet or raining. Excess sunlight will cause color fading.

## TO DISASSEMBLE:

Before disassembly, remove all accessories from plastic sleeve and pockets. To disassemble, always start by removing the corner connector pieces on the top RED rods first. Then continue to disassemble all the rods one section at a time.